


Operation Instruction of Laser Pointer


REPLACING THE BATTERIES

- Remove the laser pointer back tube
- Remove used batteries and replace with two new AAA batteries.
- Insert batteries with the negative (-) side facing toward the spring

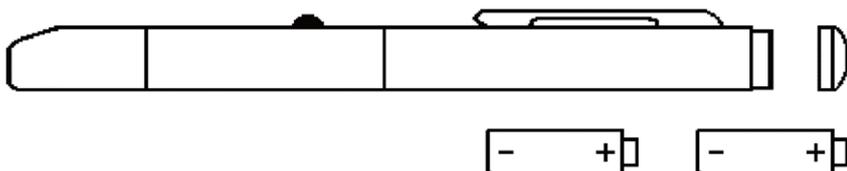

OPERATING THE LASER POINTER

- Simply press the momentary push button to activate the laser pointer and release it to deactivate

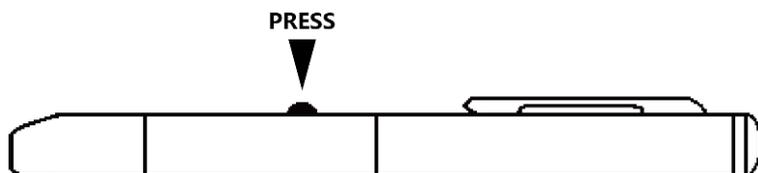

WARNING

SAFETY PRECAUTIONS

- Do not use this product where the temperature exceeds 35C° or goes below 15 C°.
- It is normal. The performance of the green laser pointer to be slightly affected by temperature.
- This product may malfunction if immersed in water or exposed to high levels of humidity.
- Dropping or impacting this product is not be used for a long period of time.
- For the high performance of the green laser the alkaline batteries are strongly recommended
- Keep this product away from children.
- The warranty will no longer exist once the product been taken apart.
- Warm up time under 5 minutes

DISPOSAL OF BATTERIES

- Batteries must not belong to domestic waste.
- As a consumer you are obliged to give back all used batteries. You can hand in old batteries to the public as assembly points in your municipality or everywhere you can buy batteries of the relevant sort.
- You will find the following symbols on harmful substances contenting batteries:



RoHS

